

9.4 CONTROL PANEL SECTION (1/2)

A


B

C

D

E

F

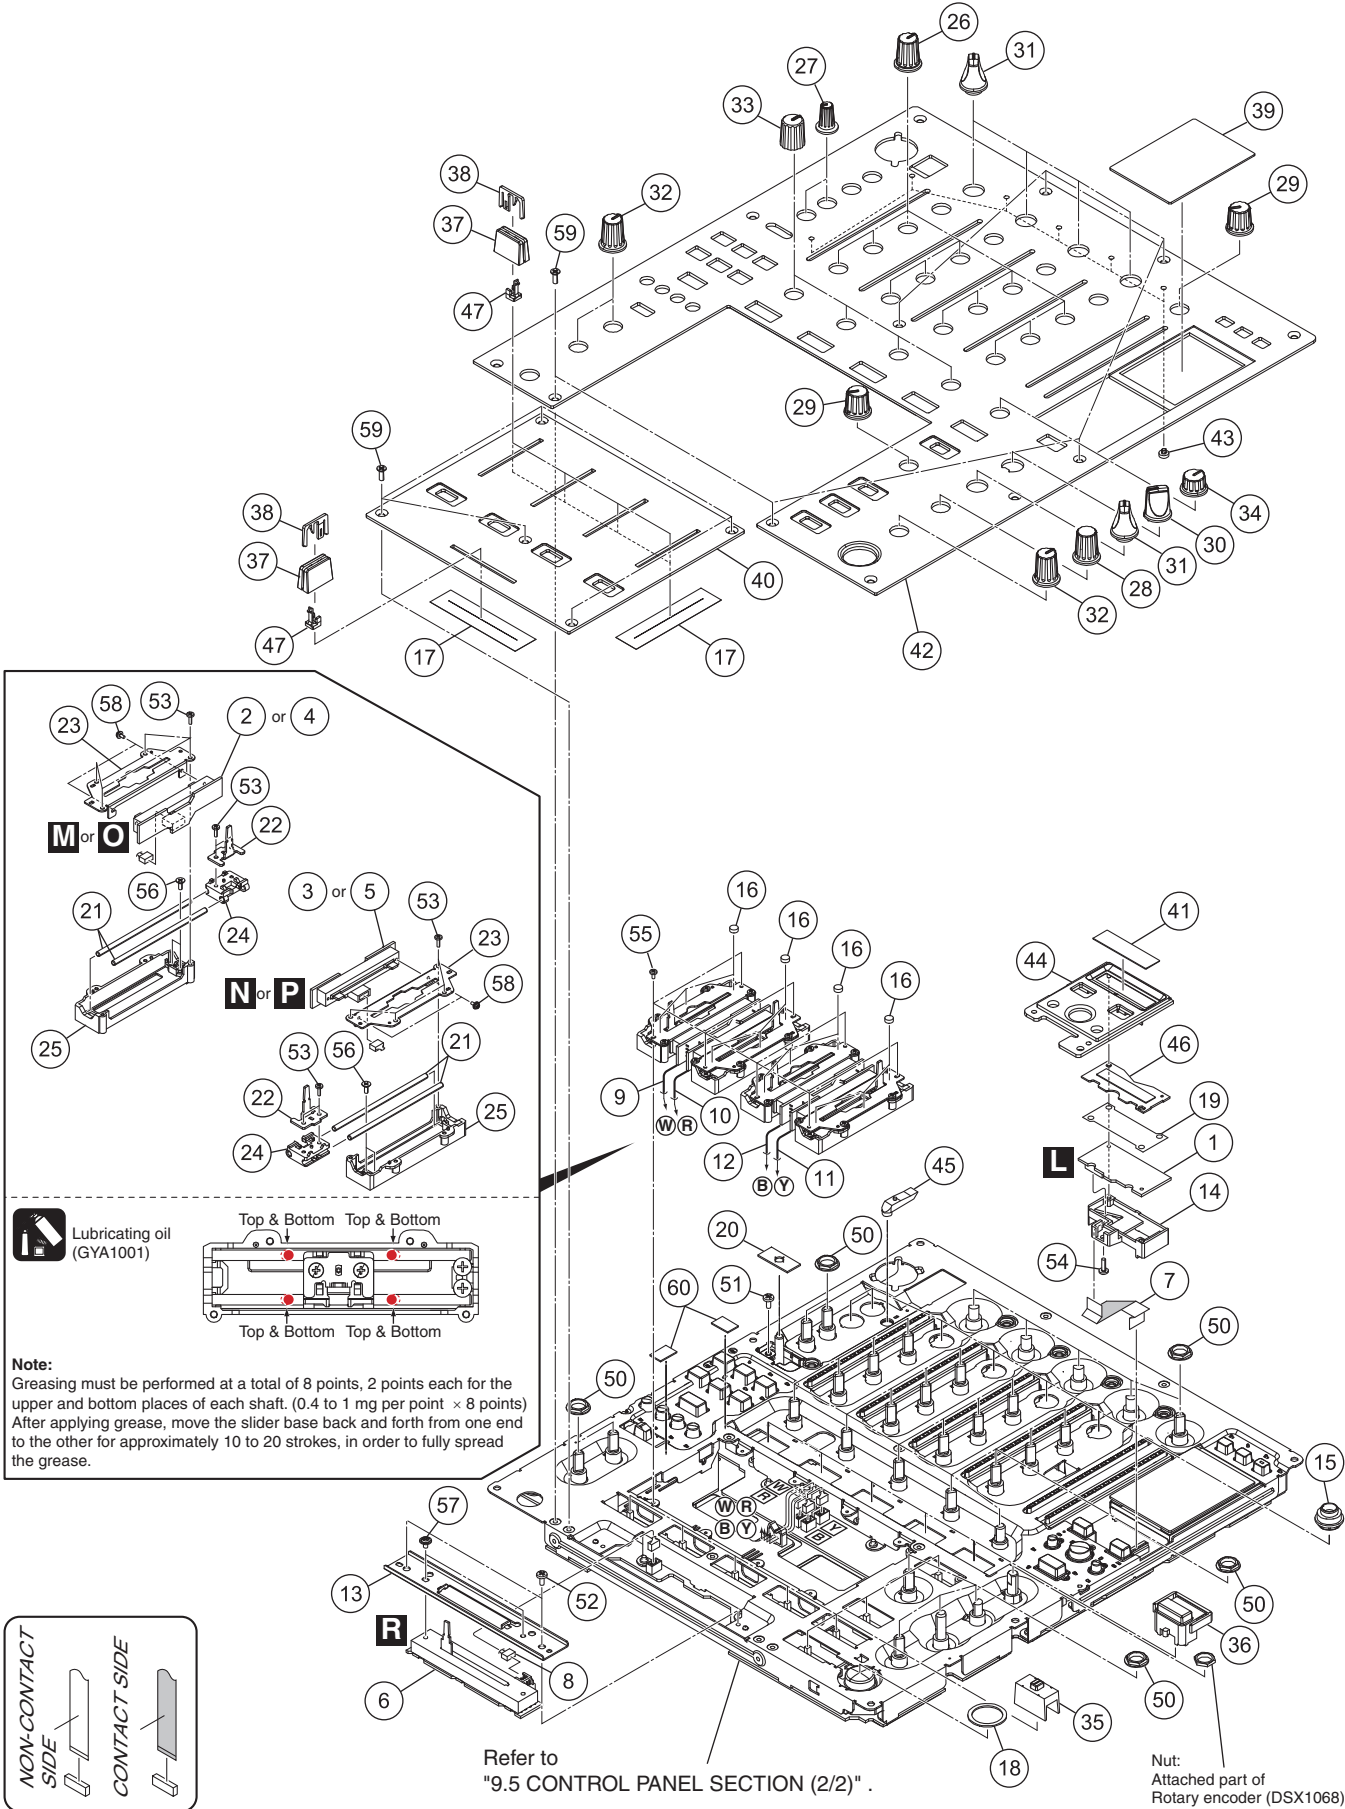

CONTROL PANEL SECTION (1/2) PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	CDCB Assy	DWX3191	46	Lens (CDC)	DNK5871	
2	FAD1 Assy	DWX3198	47	Slider Knob Stopper	DNK5888	A
3	FAD2 Assy	DWX3199	48	•••••		
4	FAD3 Assy	DWX3200	49	•••••		
5	FAD4 Assy	DWX3201	50	Flange Nut M9	DBN1008	
6	FADC Assy	DWX3202	51	Screw	AMZ26P040FTC	
7	FFC	DDD1582	52	Screw	BBZ30P060FTC	
8	Connector Assy	PF03PP-B07	53	Screw	BPZ20P060FTC	
9	Connector Assy	PF03PP-B12	54	Screw	BPZ26P080FTC	
10	Connector Assy	PF03PP2B07	55	Screw	BSZ20P040FTB	
11	Connector Assy	PF03PP4B12	56	Screw	CPZ26P080FTC	B
12	Connector Assy	PF03PP6B07	57	Screw	IMZ30P040FTC	
13	CRF Stay	DNF1870	58	Screw	PMH20P040FTC	
14	CDC Holder	DNK5842	59	Screw	CCZ30P080FTB	
15	Bush	DNK5974	60	Spacer TFTB	DEC3300	
16	SW Cushion HH48/2	DEC2538				
17	Fader Packing	DEC2903				
18	SW Packing (EF)	DEC2929				
19	CDC Tape	DEC3324				
20	SW Packing	DED1177				C
NSP 21	Guide Shaft (S)	DLA1918				
22	Lever Plate	DNH2954				
23	VR Stay	DNH2955				
24	Slider Base	DNK5851				
25	Shaft Holder	DNK5852				
26	Rotary SW Knob (B)	DAA1176				
27	Rotary SW Knob S (A)	DAA1177				
28	Rotary SW Knob (C)	DAA1180				
29	Rotary SW Knob (MA)	DAA1198				D
30	Select Knob	DAA1205				
31	FX Sel Knob	DAA1213				
32	Rotary Knob (BN)	DAA1220				
33	Rotary SW Knob (HM)	DAA1256				
34	Rotary Knob Low (BN)	DAA1265				
35	Slide SW Cap (W)	DAC2401				
36	Button (CUE)	DAC2503				
37	Slider Knob 1	DAC2684				
38	Slider Knob 2	DAC2685				E
39	FL Panel	DAH2829				
40	Fader Panel	DAH2830				
41	CDC Sheet	DEC3325				
42	Control Panel	DNB1186				
43	Lens	DNK4532				
44	CDC Panel	DNK5846				
45	Lens (USB)	DNK5848				